GB GSF 4851

PROGRAMME CHART

Comparez le programme avec la plaquette des valeurs énergétiques

Important:

- **If a fault occurs or you wish to change the current programme, press the "START" button for about 5 seconds until the Start indicator lamp switches off ! Refer to the "Troubleshooting guide" in these user instructions to remedy any problems.**
- **Sometimes even when the regeneration salt container is full, the corresponding indicator lamp may illuminate during the first wash cycle.**
- **Switch off the dishwasher once the "Start" indicator lamp has switched off. If you switch off the dishwasher during a wash cycle, when switched on again the dishwasher resumes the cycle from where it was interrupted.**

Ein/Aus **On - Off Button**
Start button indicator lamp :
Switches "on" when the dishwasher is operating.
Flashes when a fault occurs.
Switches off at the end of the programme.

Programme progress indicator
Vorspülen **Pre-rinse**
Reinigen **Washing**
Trocknen **Drying**
Ende **Programme end**

Wasser **Water tap indicator**
Turn on the tap.

Sprüharm **Spray Arm Block indicator**
Release the lower spray arm

Wasser-stop **Water stop indicator**
"Water stop" device not working. Switch off the dishwasher and shut off the water tap

Rinse aid level indicator
Klarspüler Add rinse aid

Salt level indicator
Salz Add regeneration salt

3h 6h 9h
Delay timer
Starts the dishwasher at the set time: after 3-6-9 hours.

Öko Trocknen **Eco-Dry**
Dry cycle without using fans.

Programme	Load Crockery and cutlery	Final rinse temperature:	Detergent dispenser: +) with pre-rinse -) without pre-rinse		Consumption ***					
					Normal load					
			** small compartment	large compartment	Water (Liter)	Energy (kWh)	Time (Min.)			
Vorspülen	Crockery to be washed later.	-	-	-	**5.0**	**0.02**	**9**			
Bio-Spar 50 °C *	Normally soiled crockery, with dried-on food.	65 °C	-	+	**12.0**	**1.25**	**73**			
Bio-Normal 50 °C * 1)	Normally or heavily soiled crockery with dried-on food.	65 °C	+	+	**16.5**	**1.30**	**82**			
Normal 65 °C	Normally or heavily soiled crockery.	65 °C	+	+	**16.0**	**1.44**	**82**			
Intensiv 70°C	Heavily soiled pans and saucepans.	65 °C	+	+	**21.0**	**1.68**	**93**			

***)** Recommended programme for use with **"new generation"** enzyme-based detergent.
****)** Pre-rinse
*****)** Values for normal conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.
1) Check the programme on the energy data plate.

Quick reference guide

Also refer to the “dishwasher loading instructions” which contain detailed information and useful tips.

GB

Daily check list:

1. Turn on the tap.
2. Arrange crockery so that items do not touch each other.
3. Make sure the water jet can reach all loaded items and that the spray arms turn freely.
4. Fill the detergent dispenser and check the salt and rinse aid levels.
5. Close the dishwasher door.

Tips:

Crockery:

- Load crockery upside down on the racks.

Cutlery:

- The cutlery basket can be removed to increase available space.
- Place the cutlery unsorted in the cutlery basket with the handles positioned downwards.
- To avoid the risk of injury on sharp knives and forks, cutlery can also be placed in the basket with the handles positioned upwards.

Cups:

- Load cups at an angle to facilitate water circulation.

Silver cutlery:

- Always hand wash silver cutlery immediately after use. Follow the detergent manufacturer's directions on the detergent pack.

Important:

- **Only load the appliance with dishwasher-proof crockery and cooking utensils.**
- Certain wooden and aluminium articles may discolour.
- Glued, plastic utensils may be heat sensitive.
- Tin may become dull.
- Decorated crockery (unglazed) may fade.
- Glasses may become dull.

Upper rack

Crockery holder:

- Down: cups and long-stemmed glasses.
- Up: plates.

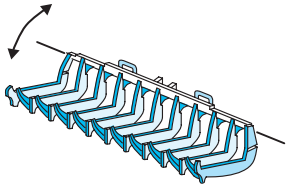

Cutlery holder for long utensils:

- Up:
  glass holder (gently lift up and release).
- Down:
  large cutlery (gently lift up)
- Place knives with blades facing downwards.

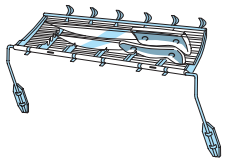

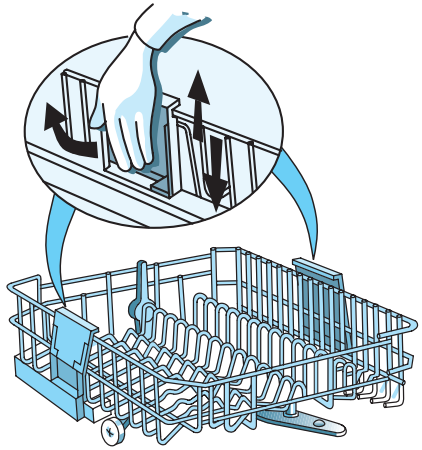

Glass holder:

- The glass holder can be moved sideways.
- Down: short glasses.
- Up: long-stemmed glasses.

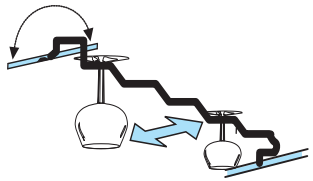

Height adjustment:

(The dishwasher is delivered with the upper rack in the top position).
The rack height can also be changed when loaded.

- To lower: pull out the two side handles and gently lower the rack.
- To raise: pull up the two side handles until the rack clicks into place.
- **The rack must be level on both sides.**

Lower rack:

Plate holders:

- The plate holders may be removed to increase available space.
- To remove, pull the handle up.
- To reposition, simply insert in the required position (normal or crosswise).

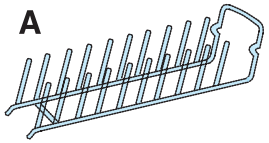

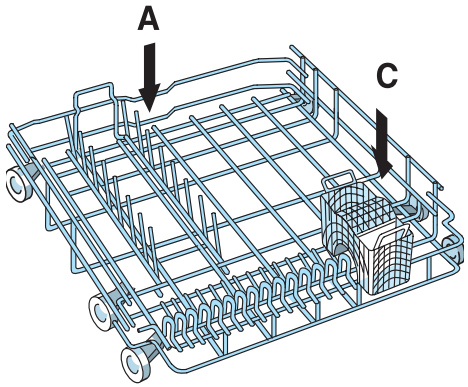

Cutlery basket: the cutlery basket may be removed to increase available space